 



# SANYO



Dual Camera  
VPC-CG10EX  
VPC-CG10  
VPC-CG10GX

## Xacti QUICK GUIDE


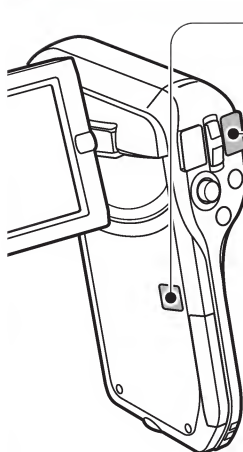
### STEP 1 RECORD A VIDEO CLIP




- 1 Turn on the camera.
  - Press the ON/OFF button for at least 1 second.
  - If the screen to set the date and time appears, press the MENU button 2 times to cancel it.
- 2 Press the  button to begin recording a video clip.
  - To stop recording, press the  button again.

If the image is not captured...


Is there enough power left in the battery? Recharge the battery pack.




(See "Charge the battery pack" on the reverse side.)
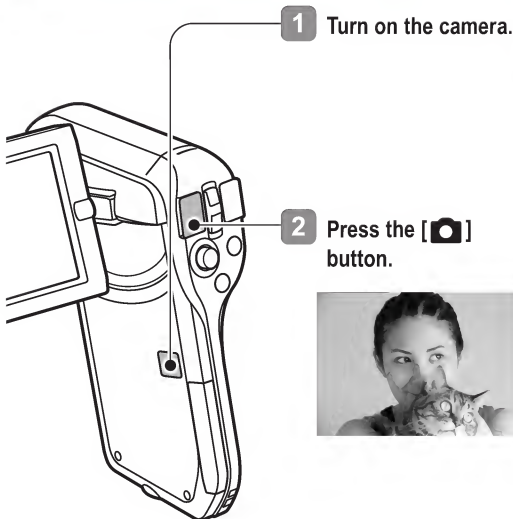
### STEP 2 CAPTURE A STILL IMAGE

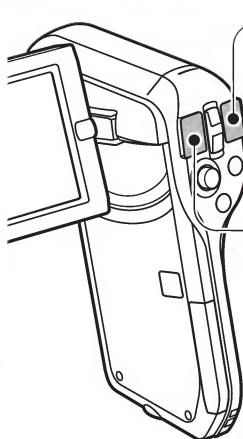


You can capture a still image while recording a video clip.




- 1 Press the  button to begin recording.
- 2 To capture a single shot while recording, press the  button.
  - The scene at the time the  button was pressed is captured as a still image.

## STEP 3 VIEWING IMAGES

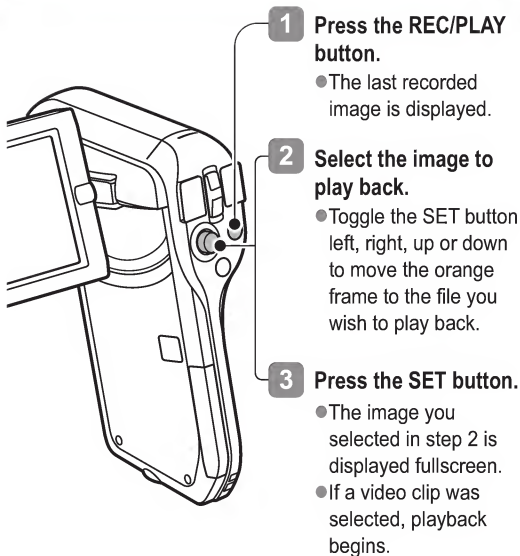

## STEP 4 DELETING IMAGES

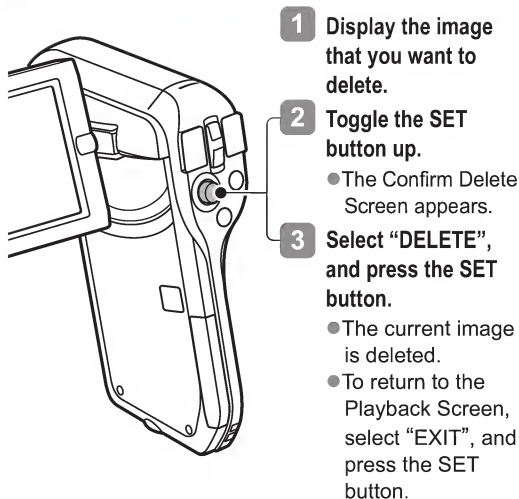


Did your photos turn out the way you hoped? Even if you make a mistake, it's easy to delete the pictures you aren't satisfied with. Unlike film cameras, with a dual camera you can take all the photos you want, keep the ones you like and delete the rest.

## PREPARE THE BATTERY PACK

### Charge the battery pack


Use the supplied charger to charge the battery pack.

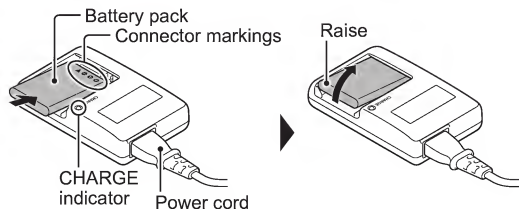

The CHARGE indicator shows the battery pack charge status.

- Lights red during recharging.
- Turns off when battery pack is fully charged.
- The charging time is approx. 120 minutes.

### Insert the battery pack

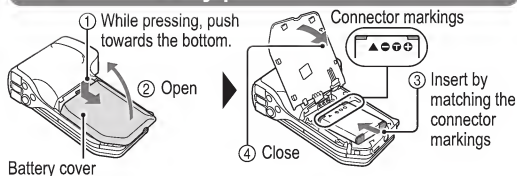

## INSERT THE CARD

- An SD Memory Card is not included with your camera. Please purchase a commercially sold card.
- In this manual, the SD Memory Card is referred to as the "card".

